


# Under Run AT Case and Transfer Box Protective Shield

**A**


## Toyota Land Cruiser 100

Model Year: 1998 - 2006

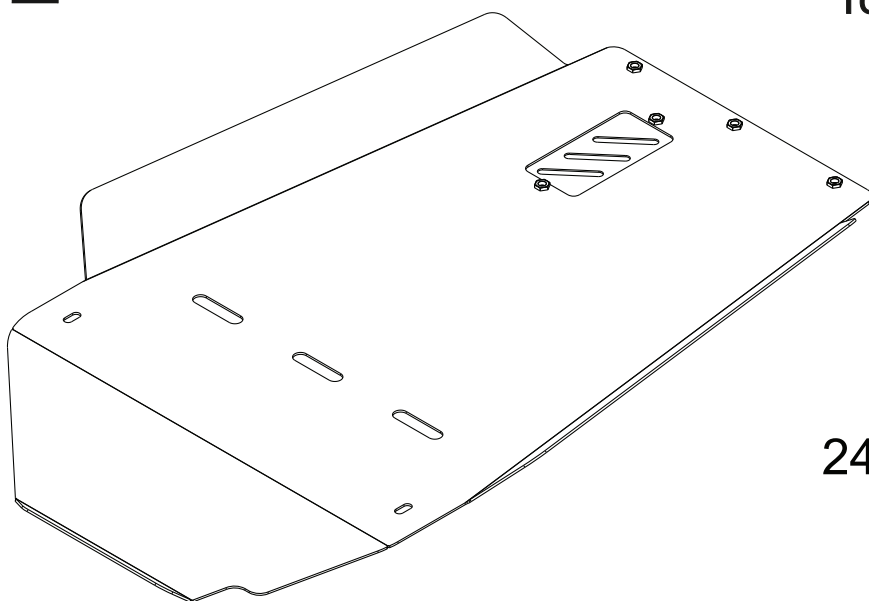


24.0536 and 24.1738

**B**

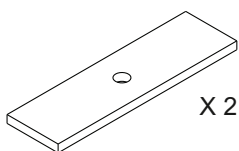


X 2

**C1**

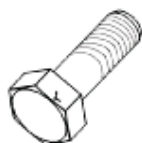

2 x M 10x30

**C2**

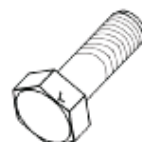

5 x M 8x20

**D1**




2 x Ø10


**D2**




5 x Ø8

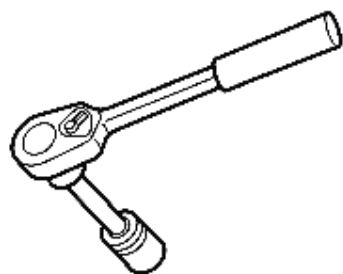


**1**

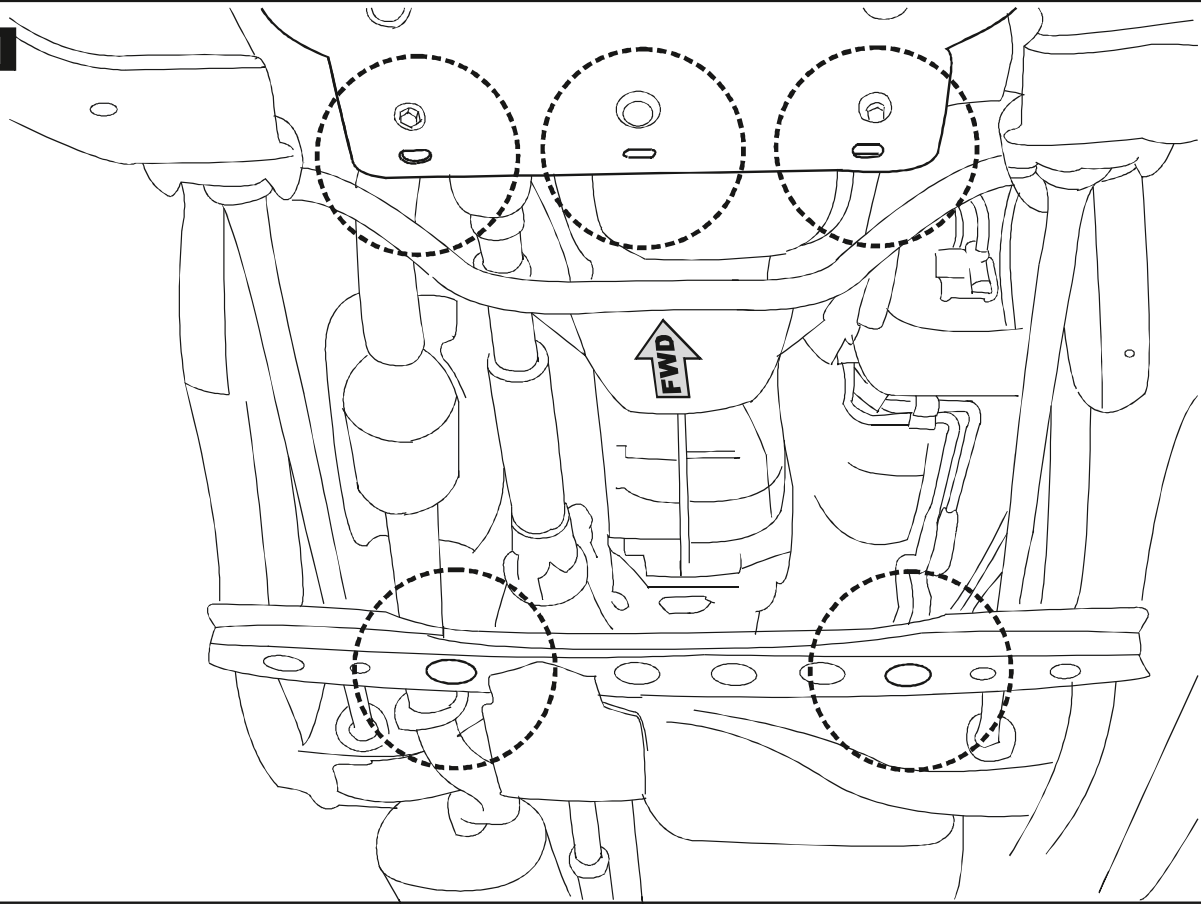

**2**

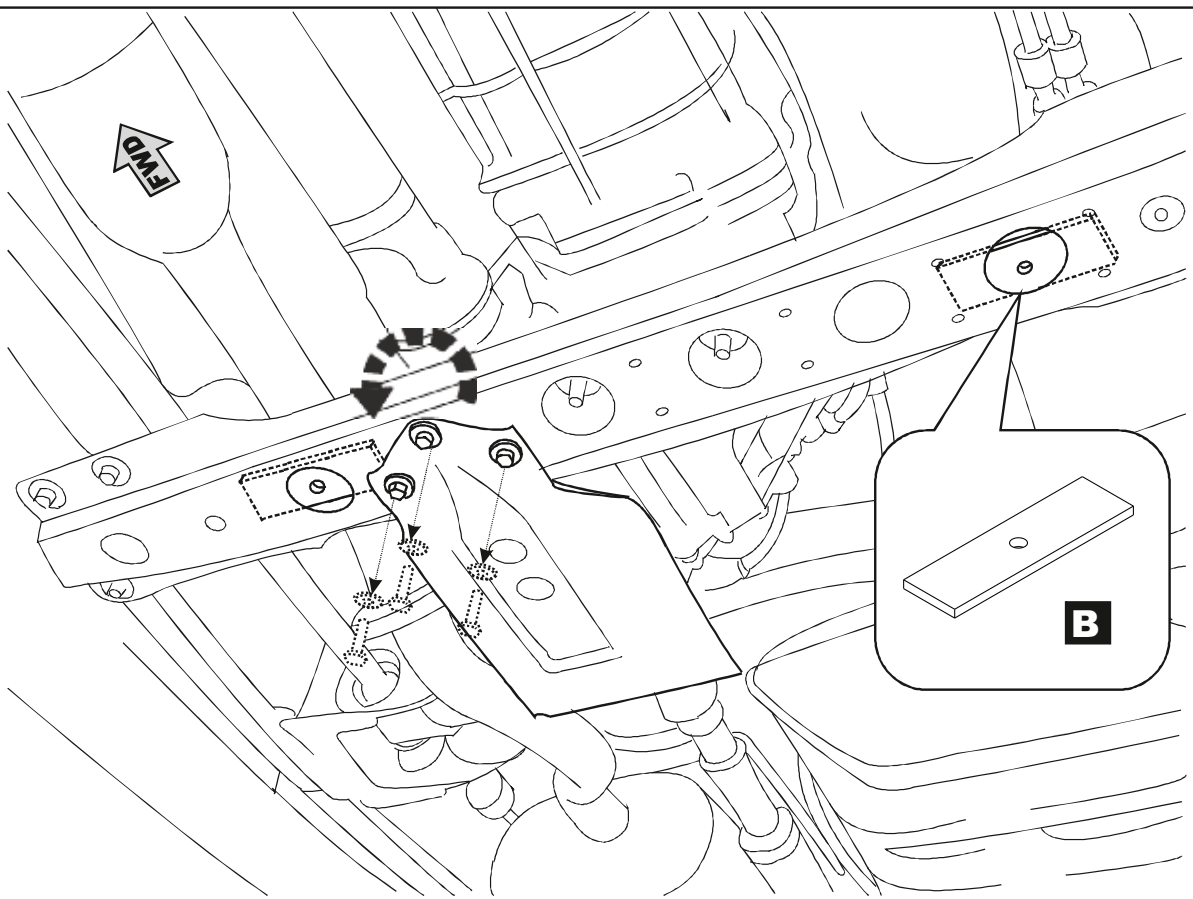

**3**

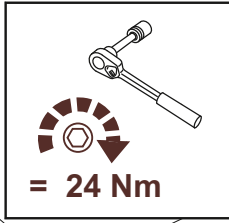

**FWD**

